



PowerTel M7000i mobile phone

Operating Instructions





Hearing aid compatibility

This telephone is equipped with T Coil coupler making it compatible with most popular hearing aids. Due to the wide range of hearing aids available there is no guarantee that the telephone will function with all hearing aid models. Please check your hearing aid immunity rating is higher than M2. This rating can be provided by the manufacturer of your hearing aid. Instruments with rating lower than M2 may not be compatible with this telephone. When using this telephone press the 'T' button on your hearing aid to switch it to Telecoil mode, this will link your hearing aid to the phone and will enable clearer sound without background noises. Please check if your hearing aid is equipped with 'T' facility and if it is automatic or manual. Hearing aids with high immunity rating equipped with automatic T mode should be able to detect your phone automatically and switch over to T position. Hearing aids with Manual T function would need manual activation of this function on your hearing aids.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



CONTENTS

Quick Start Guide	6
Quick Glance.....	6
What is in the box	8
Installing the SIM card and battery	8
Charging the battery	10
Charging via the mini USB charging socket	10
Charging via the desktop charging unit	10
Battery status	11
Switching the mobile phone on and off.....	11
Setting the display language	12
Setting the time and date	12
Taking a call	13
Rejecting a call	13
Ending a call	13
Making a call	13
Advanced Settings and Functions	14
Questions and Answers	14
The phone in details	18
Keys and Parts.....	18
Special key functions	18
Icons in the display.....	22

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



CONTENTS

Using the phone	24
General.....	24
Switching the mobile phone on and off.....	25
Using the torch.....	26
Dialling a phone number / Calling.....	27
Dialling with the speed dialling keys	27
Dialling with the one-touch dialling keys	28
Using redial / using the Calls list	28
Taking a call	28
Setting the volume	29
Hands-free	29
Options whilst in a call.....	30
3-party conference.....	31
“Phonebook” menu	32
Opening the phonebook.....	32
Checking the memory status	32
Creating a new phonebook entry	32
Calling from the phonebook	34
Editing a phonebook entry	35
Deleting a phonebook entry.....	35
Deleting all phonebook entries	35
Copying/moving all phonebook entries	36

CONTENTS

Storing a phonebook entry to a speed dialling key	36
Storing a phonebook entry to an one-touch dialling key.....	37
“Messages” menu.....	40
Messages menu.....	40
Text message settings.....	41
Writing and sending a SMS	44
Reading/deleting messages and further options	45
“Call center” menu	47
Reading the calls list.....	47
Deleting the calls list	48
Further options.....	49
“SOS” menu	51
Selecting an emergency call destination.....	51
Entering emergency call numbers	51
Select an outgoing emergency voice message.....	52
Recording a personal emergency voice message	53
Emergency call procedure.....	54
Cancel the emergency call function	55

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



CONTENTS

“Settings” menu	56
Profiles.....	56
Direct number	58
Switching Boost on and off.....	59
Tone control.....	59
Phone settings.....	60
Network settings.....	62
Security settings	63
Bluetooth.....	64
Restore settings	66
“Organizer” menu	67
Calender	67
Calculator	67
Alarm	68
Tasks	69
Stopwatch.....	69
“Services” menu	71
Appendix	72
Technical data.....	72
Service hotline	73
Problems and solutions	73

CONTENTS

Tips on the battery	76
Intended use	77
Areas of use	77
Safety Information	78
Power adapter plug	80
Disposal.....	81
Declaration of Conformity	82
Maintenance	83
Guarantee	83
Index	86
Menu tree	90

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



QUICK START GUIDE

Quick Start Guide

Important: Before you start, please read the safety information on page 78.

Quick Glance


- | | |
|----------------------------------|--|
| 1 Earpiece | 13 Boost key |
| 2 Display | 14 Volume control |
| 3 Left softkey | 15 LED Charging/Low battery |
| 4 Navigation key | 16 LED New calls/New SMS |
| 5 Call key | 17 LED Flashlight/Incoming call |
| 6 Direct call keys
M1, M2, M3 | 18 Emergency call switch |
| 7 Keypad | 19 Loudspeaker |
| 8 Star key | 20 Headset socket (Headset not supplied) |
| 9 Hash key | 21 Mini-USB charging socket |
| 10 Microphone | |
| 11 End call key /
On/Off key | |
| 12 Right softkey | |

6

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

QUICK START GUIDE

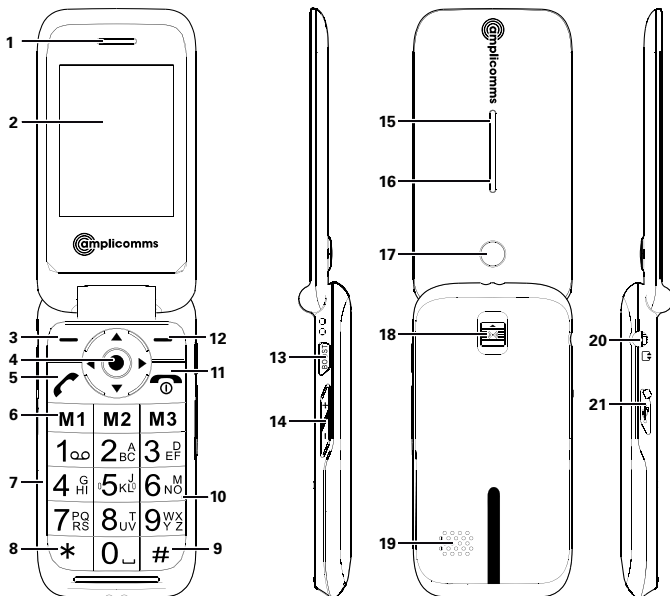

Helpline 0844 800 6503
 (See page 73 for costs and hours of operation)

QUICK START GUIDE

What is in the box

The box contains:

- | | |
|-------------------------|----------------------|
| 1 mobile phone | 1 power adapter plug |
| 1 li-ion battery | 1 operating manual |
| 1 desktop charging unit | |

Installing the SIM card and battery

Risk of swallowing small objects!

The SIM card can be removed.

Small children can swallow them.


Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

Your telephone number is carried by the SIM card, not the phone. Therefore if you use a SIM card you had in a previous phone, you will keep the same phone number.

- Switch the phone off.
- Remove the battery cover by grasping the small recess in the housing (near the speaker) and lift the rear housing cover.

QUICK START GUIDE

- If there is already a battery inside, remove it.
- Slide the SIM card with the golden contacts facing down in the moulded SIM card holder. The SIM card must be located under the metal retaining bar to be in the correct position.
- Insert the battery. The golden contacts on the battery must face towards the bottom right.

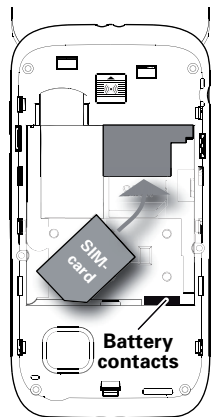

Press lightly on the top end of the battery until it snaps into place.

- Locate the battery cover on the back of the phone and secure it by gently pressing around the edges until it clicks into place.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

 **QUICK START GUIDE**

Charging the battery

- Before starting to charge the battery, check that it has been installed properly. Do not remove the battery while it is being charged. This could damage the phone.
- When charging the battery for the first time, it should be charged for at least 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles.

Charging via the mini USB charging socket

- Plug the power adapter in the mini USB charging socket.
- Connect the power adapter plug. For safety reasons, only use the power adapter plug supplied.

Charging via the desktop charging unit

- Plug the power adapter plug in the mini USB charging socket on the charging unit. Insert the phone in the charging unit to charge it.

QUICK START GUIDE

- It may take a few seconds before the phone indicates the charging process.

Battery status

The current battery charge status is indicated in the display as follows:



Full -->-->-->-->-->-->-->-->-->-->-->-->-->--> Empty

When the battery charge is low, a corresponding warning message appears in the display. Charge the battery.

When the battery charge drops below the minimum status, the phone switches off automatically.

Switching the mobile phone on and off



3 sec. Switch the mobile phone on.



3 sec. Switch the mobile phone off.



QUICK START GUIDE

Some SIM cards will require you to enter a PIN code. Follow the prompts on the screen.

The SIM code (PIN of the SIM card) that you received with your SIM card, protects the SIM card against unauthorized use. The PIN2 code supplied with some SIM cards, you need to access certain services. If you enter the PIN or PIN2 code incorrectly three times in a row, you will be prompted to enter the PUK or PUK2 code. Check with your provider if you do not know these codes.

Setting the display language

If you want to select a different language please refer to the **Settings** menu, starting on page 56.

Setting the time and date

Refer to the **Settings** menu, starting on page 56.

QUICK START GUIDE

Taking a call



Take the call

Rejecting a call



Reject the call

Ending a call



End the call

Making a call

Enter the phone number

Clear

Delete the last digit if incorrect



Dial the phone number

QUICK START GUIDE

Advanced Settings and Functions

For more details about setting up your Amplicomms M7000i and other functions follow the descriptions in this user guide.

Examples:

- Set your one-touch dialling keys -> page 37.
- Store numbers in the phone book -> page 32.

Questions and Answers

In the majority of cases your M7000i phone is supplied without a SIM card. You may find the following “Questions and Answers” (Q & A) helpful.

Why hasn't the mobile phone been supplied with a SIM card?

Many people already have a mobile phone and wish to transfer their existing SIM card over to the new phone. This has the advantage of keeping the same telephone number and if the card is subscribed to a Pay-as-you-go

QUICK START GUIDE

service then you also benefit from being able to carry over any credit that has been paid on the card.

Where can I get a SIM card from?

Any high street mobile phone shop will be able to provide you with a SIM card. Some of the major supermarket chains also provide mobile phone services and can supply a SIM card. A useful tip when choosing a SIM card / service provider however is to make sure that you have adequate signal coverage at home; this is particularly important if you live in a very rural area.

Why doesn't the mobile phone have a telephone number?

The telephone number is supplied by the service provider and will be registered onto the SIM card.

Can I use the SIM card from my old mobile phone?

Yes as long as the SIM card is less than three years old you can transfer the card over. Some old SIM cards however are not compatible with the Amplicomms mobile

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

 **QUICK START GUIDE**

phone as they are from an earlier generation of SIM card design.

Can I use a SIM card from any mobile phone company?

Yes. The Amplicomms mobile phone is what is termed as an open SIM card phone and so it is not restricted to any particular service provider or mobile phone company.

How do I pay for my calls?

There are two main types of registration with a service provider or mobile phone company. One is a contract – this is where you sign up for an agreed contract over several months / year and pay an agreed monthly fee. This is more suited to people who are using their mobile phone as part of their job for example. The other is Pay-as-you-go, sometimes abbreviated to PAYG. With this type of service you add credit to the card and top up as and when required. Topping up the card is easy, you can do this over the phone, on-line, at many shops and even some cash points allow you to do this. PAYG is more

QUICK START GUIDE

suited to less frequent users.

How do I find out my credit balance?

The service provider of the SIM card should have provided an information pack with the card. This will give details of a short number to dial in order to check your balance. These access codes differ between mobile phone companies so please check the details specific to your service provider. Key in your number, press the talk button and the credit balance will be announced to you.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



THE PHONE IN DETAILS

The phone in details

Keys and Parts

for the explanation of keys and parts please refer to page 6.

Special key functions

Left softkey

In standby -> open the main menu
In menus the function changes due to the term in the display above the softkey (e. g. **OK, Select**).

Right softkey

In standby -> open the phonebook
In menus the function changes due to the term in the display above the softkey (e. g. **Back**).

Direct call keys

M1, M2, M3 - pressing one of these keys dials the assigned phone number. A phonebook entry can be assigned to each one-touch dialling key (refer to "Storing a phonebook entry

THE PHONE IN DETAILS



to a one-touch dialling key“ page 37).

Note: Since this operation only requires a short press of a button, it could lead to unintentional dialling.

Call key

- Take a call or dial a number.

- Open the call list and the redial list

End call key

- End or reject a call

- Cancel the current process and return to standby (in menus)

- Switch the mobile phone on and off

Navigation key

Navigate through the menu.

In standby the navigation key offers

a quick access to specific menu

items that you can define yourself

(refer to page 61). The default settings are as follows:

▲ - Shortcuts: Quick access to important settings.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



THE PHONE IN DETAILS

- ▼ - Alarm: Setting an alarm time.
- ◀ - User profiles: Activation/Customisation of a user profile.
- ▶ - Calculator
- ⊙ - Centre of the navigation key
In menus: function "OK".
In standby: press and hold for approx. 2 sec to switch the torch on/off.

Digit key 0

In idle mode, long press (approx 3 s) to toggle the tone control setting between "Low frequency", "High frequency" and "Normal frequency". (See page 59 for explanation of tone control).

Digit key 1

Long press (approx. 3 s) dials the number to access your voice mail messages.

THE PHONE IN DETAILS



Note: If prompted, it may be necessary to enter your network's voice mail number first. Refer to the documentation supplied with your SIM card for this number.

Star key

- to enter the international prefix “+” in pre-dialling (press 2 times) or to enter P (pause)/W (wait) (may be necessary for call-through numbers or remote accessing an answering machine).

- when entering text: open the special character table.

Hash key

- In standby: long press toggles between selected user profile and silent mode.

- when entering text: toggles between case and numbers.






Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

THE PHONE IN DETAILS

- Volume control** +/- keys: - In standby: adjusts the volume level of the ringtone
- Whilst on a call -> adjusts the ear-piece or Hands-free volume.
- Boost key** - In a call: press to toggle between boost and normal volume.
- SOS key** Start the SOS sequence. For details please refer to the SOS menu, starting on page 51.

Icons in the display

-  Signal strength of the phone's connection
-  Battery capacity (refer to page 11)
-  New SMS
-  New call
-  Call forwarding active

THE PHONE IN DETAILS



Alarm is activated



Boost is activated



Profile "Outdoor" or "General" is activated



Profile "Meeting" is activated



Profile "Silent" is activated



A headset is connected



Bluetooth is activated



The "Roaming" symbol will appear if the phone switches to an alternate network provider. This may occur for example when entering another country. The Roaming facility depends on your network provider. Call your network provider if you have any queries regarding this service.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

USING THE PHONE

Using the phone

General

All the functions can be accessed via the various menus.

- Use the arrow keys ▲ /▼ to scroll through the menus and the lists (e. g. phonebook).
- Press **Back**, to return to the last step.
- Press **OK**, to get to the next step.
- When entering text (e. g. phonebook or SMS) use the **#** key to toggle between uppercase letters (ABC), lowercase letters (abc), words beginning in size (Abc) or numbers (Numeric).
 - In order to enter text, press the key labelled with the corresponding letter/character. If the first character of the group is required, press the key once. If the second character is required, press it twice, and so on. To enter two characters assigned to the same key, press the key the respective number of times to enter the first character. Then wait for approx. 2 sec.

USING THE PHONE

and enter the second letter.

- Use the arrow keys ▲ /▼/ ◀/▶ to place the cursor and press **Delete** for deleting characters.

Important Note: If the display light turns off, any key-stroke activates only the light again. You must press the desired button a second time to perform the function.

Switching the mobile phone on and off

Switch off: Press and hold the red end call key. After a few seconds the telephone will be switched off.

Switch on: Press and hold the red end call key until the display light will be switched on. Enter the PIN code for your SIM card and press **OK**. Entering the PIN code is not required if this feature is switched off for your SIM card (refer to page 63 "SIM lock" / not available for every provider).

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

 **USING THE PHONE**

Using the torch

Switch on: Press and hold the red button in the centre of the navigation key in standby for approx. 2 sec.

Switch off: Press and hold the red button in the centre of the navigation key in standby for approx. 2 sec.

Note:

- **The light is generated by a high-power LED. Do not shine directly into eyes or optical devices.**
- **Please remember that by the operation of the torch, the operating time to the next charging of the phone is shortened.**

USING THE PHONE

Dialling a phone number / Calling

- The phone must be in standby (SIM card inserted and the phone switched on).
- Enter the telephone number incl. the prefix. For entering a + in front of the country prefix press * quickly two times.
- Press the green call key to dial the phone number.
- Press the red end call key for ending the call.

Dialling with the speed dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired digit key for approx. 3 seconds. Each stored number is dialled. To program the speed dialling keys see "Storing a phonebook entry to a speed dialling key," page 36.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

USING THE PHONE

Dialling with the one-touch dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired one-touch dialling key. Each stored number is dialled. To program the one-touch dialling keys see "Storing a phonebook entry to an one-touch dialling key," page 37.

Using redial / using the Calls list

- In standby press the green call key. A list of the last calls is shown (Missed calls, dialled calls, received calls). Select an entry using the arrow keys ▲ / ▼.
- Press the green call key to dial the selected phone number.

Taking a call

- If your phone is ringing press the green call key.
 - Press the red end call key to reject the call. The caller gets the busy tone (depending on your provider).

USING THE PHONE

Use the right softkey to switch off the ring tone (“**Silent**”). After this you can reject the call by pressing the right softkey (“**Reject**”).

Pressing the left softkey you take the call with **Answer**.

Setting the volume

- During a call you can set the volume using the + / - keys on the right hand side of the phone. The setting will be saved.

Hands-free

- During a call press **H-Free**. You can hear the caller via the loudspeaker.
- For switching off press **H-Held**. The loudspeaker will be switched off.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

USING THE PHONE

Options whilst in a call

You can select the following **Options** with the left softkey:

- **Hold** -> The call is put on hold. To retrieve the call press **Options/Retrieve**
- **End single call** -> End the call (same as end call key).
- **Phonebook** -> Open the phonebook.
- **Call history** -> Open the call history.
- **Messages** -> Open the messages menu.

USING THE PHONE

3-party conference

“3-party” is a provider dependant feature. Establishing a 3-party conference lets you talk to two subscribers simultaneously.

- Call the first subscriber.
- Enter the phone number for the second subscriber and press the green call key.

or

press **Options** -> **Phonebook** or **Call history** to select an entry. Press **Options** and select **Call - OK**.

- When the second subscriber answers, press **Options** and select **Conference - OK** to establish the 3-party conference. Press **Options** -> **Switch** to toggle between the two subscribers.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



"PHONEBOOK" MENU

"Phonebook" menu

You can save names and phone numbers in the internal memory (up to 300 entries) and on the SIM card.

Opening the phonebook

- In standby press **Names**
- or
- During a call press **Options**, select **Phonebook** and press **OK**.

Checking the memory status

For checking how many names and phone numbers are stored in the phonebook press **Names** -> **Options** -> **Phonebook settings** -> **Memory status** -> **OK**. The status of the SIM and phone memory is displayed.

Creating a new phonebook entry

- Press **Names**, select **Add new contact** at the very top -> **Options** -> **Select**.

“PHONEBOOK” MENU



- Select whether the new entry should be stored to the phone's memory or to the SIM card and press **OK**.

Note: If the entry is saved to the SIM card, you can only enter the name and one phone number.

- Enter the name and press ▼.
- Enter the (first) phone number and press ▼.
- If necessary enter additional phone numbers (Home number/Office number). After every input press ▼.
- Assign a ring melody to the entry. Use ◀ and ▶ to select a melody. If **Default** is selected, the standard ringtone (as set in the profile) is used. Select **New record** to record a personal ring tone or speak any text to the telephone's microphone. Your recorded words will be used as ringtone for this entry. To do this, press **Options** and say your personal ringtone into the microphone.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"PHONEBOOK" MENU

- Via **Options - Add detail** you can enter further phone numbers for this entry (office, mobile. . .), an email address or a company name.
- When you are finished entering information for the new entry, press **Options -> Save**.

Note: Your personal ringtone

You can record e. g. "Peter is calling" as a ringtone. Did you associate this ringtone to phonebook entry "Peter", your phone will announce calls from Peter with: "Peter is calling".

Calling from the phonebook

- Press **Names** to open the phonebook.
- Select an entry using the arrow keys or enter the first letter for the entry.
- Press the green call key to dial the phone number.

"PHONEBOOK" MENU

Editing a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options**, select **Edit** and press **OK**.
- Edit the entry.
- Press **Options** -> **Save**.

Deleting a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options**, select **Delete** and press **OK**. Press **Yes** in the following confirmation query.

Deleting all phonebook entries

- Press **Names** -> **Options** -> **Phonebook settings** -> **Delete all contacts**. Select whether the contacts in the phone or on the SIM card should be deleted and confirm.

"PHONEBOOK" MENU

Copying/moving all phonebook entries

- Press **Names** -> **Options** -> **Phonebook settings** -> **Copy/Move contacts**. Select whether the contacts in the phone should be copied/moved to the SIM card or vice-versa and confirm.

Note: The contacts will be deleted from their original location when moved!

Storing a phonebook entry to a speed dialling key

- Press **Names** -> **Options** -> **Phonebook settings** -> **Speed dial** and press **OK**.
- Make sure that the feature **Speed dial** is switched on.

Note: When you see "Off" below status press the left softkey (OK) and switch on the function.

- Select **Set numbers** and press **OK**.
- Select a button from the list (2...9) and press **Edit**.

"PHONEBOOK" MENU

- The phonebook is opened. Select an entry and press **OK**.

Storing a phonebook entry to an one-touch dialling key

- Press **Menu** -> **Settings** -> **Direct Number** -> **OK**
- Select a direct call key (M1, M2, M3) and press **OK**.
- Change the name for the key if necessary and press **▼**.
- Press **Edit** -> **Add from phonebook** -> **OK**, select an entry and press **OK**.

or

Press **Edit** -> **Enter number** -> **OK**, enter a phone number and press **OK**.

Note: To edit or delete the entry press **Options** -> **Edit** or **Remove**.



"PHONEBOOK" MENU

Further options

With the phonebook open and an entry selected press

Options and select one of the following options:

- **View:** The entry is shown
- **Send text message:** Send a SMS to the respective phone number.
- **Call:** To make a call to the phone number.
- **Edit:** You can edit the entry.
- **Delete:** The entry will be deleted.
- **Copy:** You can copy the entry to the telephone or to the SIM card.
- **Add to block list:** The entry will be added to the block list.
- **Groups:** You can define caller groups. In these caller groups, you can group phone book entries stored in the phone book of the phone.

"PHONEBOOK" MENU

- **Phonebook settings**
 - **Preferred storage:** Select where new entries should be saved (SIM card, telephone).
 - **Speed dial:** Switch on the speed dial function and edit the speed dial buttons.
 - **Memory status:** Shows the number of entries on the SIM card and in the phone.
 - **Copy contacts:** Copy all contacts from the SIM card to the phone and vice-versa.
 - **Move contacts:** Move all contacts from the SIM card to the phone and vice-versa.
 - **Delete all contacts:** Delete all contacts.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



"MESSAGES" MENU

"Messages" menu

You can send and receive text messages (SMS / Short Message Service). Received messages are stored either internally in the phone or on the SIM card. Unread messages are stored in the Inbox. When a new SMS is received, a message appears on the display.

If the memory is full, you will receive a message. To receive new messages you will have to delete old messages.

Messages menu

Press **Menu** -> **Messages** -> **OK**. You will have the following options:

- **Write message:** To write a new SMS.
- **Inbox:** Open the list of received messages.
- **Drafts:** Open the draft list.
- **Outbox:** Open the list of messages still to be sent.
- **Sent messages:** Open the list of already sent messages.

"MESSAGES" MENU

- **Broadcast message:** If your provider supports this service you can change some parameters in this menu.
Note: These settings should only be changed by advanced users.
- **Message settings:** You can change some of the SMS related parameters.
Note: These settings should only be changed by advanced users.

Text message settings

Note for the SMS centre number: This particular number is needed for sending and receiving of SMS. It is stored on the SIM card correctly. In certain cases it is necessary to check that number or to change it.

- Press **Menu**, select **Messages** -> **Message settings e** and press **OK**.
- You will have the following options:
 - **SIM**

"MESSAGES" MENU

- **Profile settings** (the active profile is marked with a green tick).
 - Select the desired profile, press **Options**, select **Activate** or **Edit** and press **Select**.
 - Editing options include: change the **Profile name** and the **SMSC address** (the phone number for your provider's SMS centre).
 - **Validity period** (change the setting using ◀ and ▶).
 - **Message type** (this parameter should remain **Text** and not be changed.)
 - **Delivery report** (change the setting using ◀ and ▶).
 - **Reply path** (this parameter should remain **OFF** and not be changed.)
 - **Voicemail server**: You can change your voicemail phone number. If you have questions, please contact your network provider.
- Exit the menu by pressing **Back** or **Save**.

"MESSAGES" MENU



- **Memory status:** the status of the SIM and phone memory is displayed.
- **Text msg. counter:** number of sent and received SMS.
- **Save sent messages:** Select whether sent SMS should be saved.
- **Preferred storage:** Select where messages should be saved (**SIM** or **Phone**).

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"MESSAGES" MENU

Writing and sending a SMS

- Press **Menu**, select **Messages** -> **Write message** and press **OK**.
 - Write your message using the digit keys. For more information for entering text refer to chapter "Using the phone / General", page 24.
 - After having entered the text press **Options**, select **Send to** and press **OK**.
 - Select **Enter number**, press **OK**, enter the phone number including the prefix and press **OK**.
 - The entered phone number will be shown.
 - Press **Options**, select **Send** and press **OK**.
- or**
- Select **Add from Phonebook** and press **OK**.
 - Select an entry and press **OK**.
 - The selected entry will be shown.
 - Press **Options**, select **Send** and press **OK**.

"MESSAGES" MENU

Reading/deleting messages and further options

- Press **Menu**, select **Messages**-> **Inbox** and press **OK**.
- Select a message.
- Press **Options** when viewing the list. You have the following options:
 - **View**: The message is displayed.
 - **Reply by SMS**: Reply to the number from which the message was sent.
 - **Call sender**: Call the sender on the phone.
 - **Forward**: Forward the message to a different number.
 - **Delete**: Delete the message.
 - **Delete all**: Delete all messages.
 - **Save to Phonebook**: (only available if there is no respective entry in the phonebook yet) stores the sender's phone number in the phonebook.
 - **Delete several**: Marking options for bulk deleting several messages.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



"MESSAGES" MENU

Press **Options** when displaying the SMS content to open the following options:

- **Reply by SMS:** Reply to the number from which the message was sent.
- **Call sender:** Call the sender on the phone.
- **Forward:** Forward the text to a different number.
- **Delete:** Delete the message.
- **Advanced** with the following options: **Use number / Use URL / Use Email / Use USSD / Copy to phone/to SIM / Move to phone/to SIM.**

"CALL CENTER" MENU

"Call center" menu

A new call is shown on the display.

- Press **Back** to delete the message. The icon for a new call appears in the display. You can see this call "normally" in the **Missed calls** list.
- Press **View**, to read the caller's name and number.
- Press **Options**. For further options please refer to the following chapter..

Reading the calls list

- Press **Menu**, select **Call center** -> **Call history** and press **OK**.
- Select **Missed calls**, **Dialled calls** or **Received calls** and press **OK**.

In these lists you will have the following options:

Press **Options** and select one of the following options:

- **View**: Read the details.
- **Call**: Call the telephone number.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"CALL CENTER" MENU

- **Send text message:** Send a SMS to the phone number.
- **Save to Phonebook:** (only available if there is no respective entry in the phonebook yet) save the entry in the phonebook.
- **Add to Blacklist:** Add the entry to the block list.
- **Delete:** Delete the entry.

Deleting the calls list

- Press **Menu**, select **Call center** -> **Call history** and press **OK**.
- Select **Delete call logs** and press **OK**.
- Select a list to delete **Dialled calls**, **Missed calls**, **Received calls** or **All calls** and press **OK**. Press **Yes** in the following confirmation query.

"CALL CENTER" MENU

Further options

- Press **Menu**, select **Call center** and press **OK**.
 - **Block list:** You can enter a list of phone numbers to be blocked. If you activate this feature calls from phones with the respective numbers will not be signalled any more.
 - **Auto redial:** If the function is activated, phone numbers that were "busy," will be redialled automatically (interval 5 min, max. 5 attempts).
 - **Call time display:** If the function is activated, the duration of the call is displayed.
 - **Call time reminder:** You can specify whether you want to be alerted during a call by a beep in the ear-piece after a certain time of call duration.
For **Single** you can set a time up to 3000 sec (= 50 min), for **Periodic** you can set up a time between 30 and 60 s.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



"CALL CENTER" MENU

- **Answer mode:** With the setting **Flap answer** activated an incoming call will be taken by opening the cover. If you select **Any key** incoming calls can be taken by any key (except the right softkey and the red end call key).

When the "**Auto answer when headset mode**" setting is on and a headset is plugged in, calls will be automatically accepted.

If not a single setting is selected calls can only be taken with the green call key.

"SOS" MENU

"SOS" menu

This phone is equipped with an emergency call function. You can register up to 5 personal phone numbers for automatic periodic dialling or an emergency phone number for an emergency call centre.

Selecting an emergency call destination

- Press **Menu**, select **SOS** -> **SOS mode setting** and press **OK**.
- Select **Set 5 numbers**, if you want to call up to five personal emergency call numbers (see below) or **Set call center**, if you want to call an emergency call centre. Select **Off** for deactivating the emergency call function.

Entering emergency call numbers

- Press **Menu**, select **SOS** and press **OK**.
- Select **Set SOS number** -> **OK**, select one of the 5 possible entries and press **Edit**.
- Select **Add from phonebook**, to select a phone number

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

The logo features the text "SOS" in a large, bold, sans-serif font, with a stylized circular graphic to its left consisting of concentric arcs. To the right of "SOS" is the word "MENU" in a smaller, bold, sans-serif font. The entire logo is set against a dark background.

from the phonebook or **Enter number**, to enter the phone number manually.

or

- Select **Call center number** -> **OK** and enter the desired phone number.

Note: It is forbidden to enter a public emergency number such as police, fire and rescue control centre. It is a purely "private" emergency call.

Select an outgoing emergency voice message

- Press **Menu**, select **SOS** -> **Set outgoing voice MSG** and press **OK**.
- Select **Default**, to select the default outgoing voice message.

or

- Select **Custom**, to select a personal outgoing voice message. To use this setting you will have to record the personal outgoing message before (see below).

"SOS" MENU

Recording a personal emergency voice message

- Press **Menu**, select **SOS** -> **Set outgoing voice MSG** and press **OK**.
- Select **Custom** and press **OK**.
- Select **Record** and press **OK**.
- Speak your personal outgoing message to the microphone.
- Stop recording with **Stop**.
- Then choose **Select** and press **OK**, to activate your personal emergency contact.

With **Play**, you can listen to the control notifications.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

The logo features the text "SOS" in a large, bold, sans-serif font, enclosed within a circular graphic composed of three concentric rings. To the right of this graphic, the word "MENU" is written in a smaller, bold, sans-serif font. The entire logo is set against a solid black background.

"SOS" MENU

Emergency call procedure

Push the SOS switch on the rear side of the phone to the upper position - **SOS** is visible. When the automatic SOS call starts you will hear a siren tone.

When "Set 5 numbers" is set:

- The first phone number will be dialled.
- If the first phone number will not answer the next phone number will be dialled and so on. All phone numbers (max. 5) will be called one by one subsequently. If you have only set one phone number, the phone will only call that number cyclically. This procedure will be repeated as long as the phone's battery is not empty.

The procedure stops, as soon as the first person answers. The emergency voice message will be played. If the called party press **key "0"** within 10 seconds after your recorded voice playing ended, hands free mode

"SOS" MENU

will be activated at your side and you can talk to the called person directly.

- **Note:** Please mention explicitly in your personal emergency message, that the called party will have to press key "0" to be able to speak with you. If not, the loop continues. This prevents the emergency loop from terminating, when, for example, an answering machine takes your emergency call.
- The emergency loop continues even after an answered emergency call, until you cancel the emergency (push emergency switch down again).

Cancel the emergency call function

Push the SOS switch on the rear side of the phone in the lower position again.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"SETTINGS" MENU

"Settings" menu

Profiles

You can store different profiles (special settings dependent on user and surroundings), which you can switch quickly.

- Press **Menu**, select **Settings** -> **Profiles** and press **OK**.
- Select one of the profiles and press **Options**.
- You have the following options:
 - **Activate**: The profile with the respective settings is activated.
 - **Customize**: Change the settings for the respective profile.
 - **Alert type**: Select whether an incoming call should be signalled by **Ring only**, **Vib. only**, **Tone and Vib.** or **Vib. then ring** (Vib. = vibration).
 - **Ring type**: You can select **Beep once** or **Repeat**.
 - **Ringtone** - Set the ring tone for incoming calls

"SOS" MENU

- **Ringtone volume:** Select the volume for the ring tone.
- **Message** - Set the tone for an incoming message.
- **Message volume:** Select the volume for the incoming message tone.
- **Keypad** - Select whether the confirmation of a pressed button should be confirmed with a **Click**, a **Tone**, **Human voice tone** (with a voice prompt when entering a digit) or **Silent**.
- **Keytone volume:** Select the volume for the keytone.
- **Power on** - Set the tone for powering on the phone.
- **Power off** - Set the tone for powering off the phone.
- **Flap open** - Set the tone for opening the phone's cover.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"SETTINGS" MENU

- **Flap close** - Set the tone for closing the phone's cover.
- **System alert** - Switch the sound on/off for system notifications.

The new settings will only take effect if you press **Options** again and select **Save**, once the modifications are done.

Direct number

You can assign important phone numbers to the one-touch dialling keys **M1**, **M2** and **M3**.

- Press **Menu**, select **Settings** -> **Direct Number** and press **OK**.
- Select a one-touch dialling key and press **OK**.
- Press **Options** and change the name if necessary (max. 9 characters) and press **Options** -> **Done**.
- Go to the entry field for the number and press **Options** -> **Add from Phonebook**, select a telephone number or

"SETTINGS" MENU

select **Enter number** and enter the phone number manually.

Switching Boost on and off

- Press **Menu**, select **Settings** -> **Boost Setting** and press **OK**.
- Select **On** to activate the Boost function permanently or **Off** to deactivate it.

During a call the volume control can be used to adjust the volume level in both Boost ON or OFF modes. See page 22.

Prolonged listening at full speaker volume can cause hearing damage.

Tone control

Set the tone for the earpiece/loudspeaker.

- Press **Menu**, select **Settings** -> **Tone control** and press **OK**.
- Select **Normal frequency**, **Low frequency** (increases

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"SETTINGS" MENU

the lower frequencies) or **High frequency** (increases the higher frequencies) and press **OK**.

Phone settings

- Press **Menu**, select **Settings** -> **Phone settings** and press **OK**.
- You have the following options:
 - **Time and date:** In this menu you can **Set time/date** and **Set format** (time 24/12h / date (DD MM YYYY / MM DD YYYY / YYYY MM DD)).
 - **Schedule power on/off:** You can set up to two automatic switch on/off times for your phone.
 - Select **Enable** or **Disable** and press **OK**.
 - Select an entry and press **OK**.
 - Under "Status", using the arrow keys ◀/▶ select "Activate" to turn the function on.
 - Then enter the desired time and press **Save**.

"SETTINGS" MENU



Note: Please note that depending on the settings entering the SIM PIN is required when switching the phone on. See also -> Security settings / SIM lock, page 63.

- **Language:** Select a language for the display.
- **Pref. input method:** Select which setting you prefer for entering text (phonebook entries/SMS).
- **Display**
 - **Wallpaper:** Select a wallpaper for the standby mode.
 - **Power on display/Power off display:** Select an animation which should be played when powering the phone on/off.
- **Dedicated key:** You can assign quick access for some menus to the navigation key ▲ /▼/◀/▶. Pressing the respective key in standby opens the assigned menu directly.
 - Select a key (**Up, Down, Left or Right**), press

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"SETTINGS" MENU

Edit and select a function from the list. Press **OK**.

- **Backlight settings**
 - **Main LCD backlight:** Set the brightness and the duration for the backlight.
 - **Incoming and SMS LED:** Select whether the indicator LED for incoming calls and SMS should be always active (On), between 8 pm and 8 am off (Night mode) or always deactivated (Off).
 - **Charge LED:** Select whether the indicator LED for charging should be always active (On), between 8 pm and 8 am off (Night mode) or always deactivated (Off).

Network settings

- Press **Menu**, select **Settings** -> **Network settings** and press **OK**.
- You have the following options:

"SETTINGS" MENU

- **Network selection:** Select whether the network selection should be automatic or manual (**Selection mode**), start a **New search** or select a network from the list (**Select network**). When **Automatic** is selected the phone tries to connect to your SIM card's provider.

Security settings

- Press **Menu**, select **Settings** -> **Security settings** and press **OK**.
- You have the following options:
 - **SIM security:**
 - **PIN lock:** You can turn on or off the request for the SIM PIN when the phone is switched on. This is not allowed for some SIM cards/providers.
 - **Change PIN:** You can change the PIN für the SIM card.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"SETTINGS" MENU

- **Change PIN2:** You can change the PIN2 für the SIM card.
- **Phone security:**
 - **Phone lock:** Entering the phone lock code you can lock the phone (0000 in delivery state).
 - **Change password:** You can change the phone lock code (0000 in delivery state).

Bluetooth

- Press **Menu**, select **Settings** -> **Bluetooth** and press **OK**.
- You have the following options:
 - **Power:** Switching the function on or off. You can change the setting with the left softkey.
 - **Visibility:** Select whether your phone is visible for other Bluetooth devices when the Bluetooth function is activated. You can change the setting with the left softkey.

"SETTINGS" MENU

- **My device:** For connecting the phone to another Bluetooth device with audio profile (e. g. headset or car kit).

Previously the "Search new device" and the "pairing" with the device has to be carried out. After selecting the device and **Options** you have the following options:

- **Connect** (with the paired device)
- **Service list**
- **Rename**
- **Delete**
- **Delete all**
- **My name:** The Bluetooth name. Can be changed.
- **Preferred storage:** Select the preferred storage (M7000i: "Phone" only).

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"SETTINGS" MENU

Note: If your phone is connected to a Bluetooth hands-free device you must copy your phone book entries from your SIM card to the phone (see page 36) before you can use the hands-free device to call those numbers and to enable the hands-free device to display the caller's name instead of the phone number during a call.)

Restore settings

You can reset the phone to its factory settings.

- Press **Menu**, select **Settings** -> **Restore settings** and press **OK**.
- Enter the phone password (0000 in delivery state) and press **OK**.
- Press **Yes** in the following confirmation query.

“ORGANIZER” MENU

“Organizer” menu

Calendar

You can set the calendar from January 1970 to December 2030. With **Options** the following functions are available:

- View
- View all
- Add event
- Delete event
- Jump to date
- Go to today
- Go to weekly/monthly view
- Start of week

Calculator

The phone can support four continuous mixed arithmetic operations.

- Enter the first digit(s) for your arithmetic operation.
Enter the “dot” using the hash key.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"ORGANIZER" MENU

- Press the navigation key $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to select the operation sign (+ - x \div).
- Enter the next digit(s).
- Press **OK** or the red button in the centre of the navigation key to carry out the operation.

Alarm

You can set 5 different alarms, which will sound once, daily or only on certain days.

- Select an entry and press **Edit**.
- Switch the alarm **On** or **Off** using $\blacktriangleleft/\blacktriangleright$ and press \blacktriangledown .
- Enter the desired time.
- Select **Once**, **Everyday** or **Custom** (Options - On/Off, when ready: Options - Done).
- Select with **Alert type** what kind of alarm should be given (Ring only / Vib. only / Tone and Vib.).
- Press **Save**.

“ORGANIZER” MENU

Tasks

After pressing **Add** you can define tasks. There are various options available.

Stopwatch

The stopwatch has various features.

- **Typical stopwatch**

- **Split timing:** Stopwatch with split timing and total time. Press **Start** to start the function, **Split** to take the split time (the total time is still displayed), **Pause** or the red button in the centre of the navigation key stops the stopwatch with saving ability, and after pressing **Options** you can **Reset** or **Continue** the stopwatch.
- **Lap timing:** Stopwatch with lap timing without total time. Press **Start** to start the function, **Lap** to take the lap time (each elapsed time since the last round timing is displayed), **Pause** or the red button in the

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

"ORGANIZER" MENU

centre of the navigation key stops the stopwatch with saving ability, and after pressing **Options** you can **Reset** or **Continue** the stopwatch.

- **View records:** list of the stored records.
- **nWay stopwatch**

The nWay stopwatch is composed of 4 parallel stopwatches that you can individually start with the navigation key ▲ /▼/◀/▶.

The active timer can be started with the red button in the centre of the navigation key or the left soft key (**Start**), stopped (**Pause**) and resumed (**Cont.**).

Pressing the right softkey **Reset** resets the respective timer.

“SERVICES” MENU

“Services” menu

The items in this menu depend on your network operator.
Please check with your provider for details.



APPENDIX

Appendix

Technical data

Quad-Band	850/900/1800/1900 MHz	
Additional functions	Bluetooth, torch, emergency call function	
Battery	Li-Ion, 3.7V, 900 mAh	
Maximum earpiece volume	+35 dB	
Talk time	up to 7 hours	
Standby time	up to 8 days	
Dimensions	102 x 51 x 17 mm (closed) 195 x 51 x 11 mm (open)	
USB connection	Micro USB, EU Standard	
Headset connection	3.5 mm jack, 4-conductor (TRRS) phone connector	
SAR values	GSM 900	Head : 0.550 W/kg
		Body: 0.970 W/kg
	DCS 1800	Head: 0.062 W/kg
		Body: 0.716 W/kg



Service hotline

Should problems arise with the telephone, please refer to the following information first. In the event of technical problems, please contact our service hotline under tel. 0844 800 6503 (Using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary.) In the case of claims under the terms of guarantee, contact your sales outlet. There is a 2 year period of guarantee.

Problems and solutions

Problems

Remedy

The mobile phone cannot be switched on.	- No battery inserted. - Battery is not charged.
---	---

The phone is requesting a PUK when I switch on the phone	If you do not have the PUK for your SIM card then contact your service provider
--	---

Helpline 0844 800 6503

(See on this page for costs and hours of operation)



APPENDIX

No signal quality is displayed.

No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your service provider.

Keypad does not function or only functions very slowly.

The operating speed of the display is reduced in the case of low temperatures. This is normal.

A message appears in the display for some functions, indicating execution/use is not possible.

Some functions can only be used after the respective service has been applied for. Contact your service provider.

APPENDIX

Screen frozen or no response when pressing keys.

Remove the battery for 3 minutes and try again.

No connection to the mobile telecommunication network.

Contact your service provider.

The "Insert SIM" message appears in the display.

Ensure that the SIM card has been installed correctly. Contact your service provider, if necessary.

The battery cannot be charged or is empty within a short time.

- Battery is defective.
- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



APPENDIX

- unit with a soft, dry cloth.
- Charge the mobile for 4 hours.

Tips on the battery

- Only use batteries, cables and charging unit approved by the manufacturer, otherwise the battery could be damaged.
- Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.
- Keep the battery contacts clean and free of dirt.
- The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.

Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Areas of use

- Do not use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Check with the airline whether mobile phones may be used on board.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



APPENDIX

Safety Information

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not waterproof; therefore, keep it dry.
- Only use original accessories and batteries. Never attempt to connect other products.
- If you want to connect the phone to another device, read the manual supplied with that device with regard to any detailed safety information.
- Never attempt to connect incompatible products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM card can be removed. Caution! Small children can swallow them.

APPENDIX

- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear. This prevents any possible hearing damage.
- Only use the phone while driving or riding a transport vehicle in road traffic when using the approved hands-free equipment and appropriately positioned holders. Ensure that no safety-related functions are interfered with when operating the phone. It is essential to observe the applicable national laws and regulations.
- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls. Switch the phone off immediately if you notice or suspect any adverse effects.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

APPENDIX

- This phone is hearing aid compatible. If you wear a hearing aid, however, please contact your doctor or the hearing aid manufacturer to inquire about any possible impairments through mobile communication equipment.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

Power adapter plug



- Energiesparend
- Economisant l'énergie
- A risparmio di energia
- Energy efficient

The power adapter plug supplied fulfills the ecodesign requirements of the European Community (Directive 2005/32/EC). This means that the current consumption is considerably less, both in operation as well as in standby, in comparison to older power adapter plug models.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The symbol indicates that the device must not be disposed of in normal domestic waste!



Batteries represent a hazard to health and the environment!

Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provi-

APPENDIX

ded at collection points by local public waste authorities.

Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.



Packaging materials must be disposed of according to local regulations.



Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive: 1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.



Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free

download available on our web site

www.amplicomms.com

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth.
Do not use any cleaning agents or solvents.

Guarantee

AMPLICOMMS equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



APPENDIX

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties.

Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of Gods and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device.

Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you

APPENDIX

purchased the AMPLICOMMS device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet.

No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.



Index

3-party conference.	31	Call time display.	49
A		Call time reminder.	49
Alarm.	68	Calling.	27
Areas of use.	77	Calls list.	28, 47
Auto redial.	49	Cancel the emergency call function.	55
B		Charging the battery.	10
Battery.	8	Charging via the mini USB charging socket.	10
Battery status.	11	Checking the memory status.	32
Block list.	49	D	
Bluetooth.	64	Declaration of Conformity.	82
Boost.	59	Dedicated key.	61
C		Desktop charging unit.	10
Calculator.	67		
Calender.	67		
Call center.	47		



Dialling a phone number	27	G Guarantee	83
Direct number	58	H Hands-free	29
Display	61	I Icons in the display	22
Disposal	81	Intended use	77
E Emergency call destination	51	K Keytone	57
Emergency call numbers	51	L Language	12, 61
Emergency call procedure	54	M Maintenance	83
Emergency voice message	52	Making a call	13
Ending a call	13	Memory status	32
Entering text	24		

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



Messages menu	40	Phonebook settings	39
Mini USB charging socket	10	Problems and solutions	73
N		Profiles	56
Network settings	62	Q	
O		Questions and Answers	14
One-touch dialling	28, 37, 58	Quick Start Guide	6
Options whilst in a call .	30	R	
Organizer	67	Redial	28
P		Rejecting a call	13
Personal emergency voice message	53	Restore settings	66
Phone security	64	Ring type	56
Phone settings	60	Ringtone	56
Phonebook	32	Ringtone volume	57
		S	
		Safety Information	78
		Security settings	63



Service hotline	73	Time and date.	12
Services.	71	Tips on the battery.	76
Set time/date	60	Tone control	59
SIM card	8	Torch	20, 26
SIM security	63	V	
SMS center number . . .	41	Voicemail	42
SOS	51	Volume	29
Special key functions . .	18	Volume control.	22
Speed dialling	27, 36	W	
Stopwatch.	69	What is in the box	8
Switching the mobile phone on and off. . .	11, 25	Writing and sending a SMS.	44
T			
Taking a call	13, 28		
Tasks	69		
Technical data.	72		
Text message settings. .	41		

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



Menu tree

Messages

Write message

Inbox

Drafts

Outbox

Sent messages

Broadcast messages

Message settings

SIM

Memory status

Text msg. counter

Save sent messages

Preferred storage

Phonebook (Option)

View

Send text message

Call

Edit

Delete

Copy

Add to block list

Groups

MENU TREE

Phonebook settings

Preferred storage

Speed dial

Memory status

Copy contacts

Move contacts

Delete all contacts

Call center

Call history

Missed calls

Dialled calls

Received calls

Delete call logs

Block list

Auto redial

Call time display

Call time reminder

Answer mode

SOS

SOS mode setting

Set SOS numbers

Call center number

Set outgoing voice MSG

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



MENU TREE

Settings

Profiles

Direct Number

Boost Setting

Tone Control

Phone settings

Time and date

Schedule power on/off

Language

Pref. input methods

Display

Wallpaper

Power on display

Power off display

Dedicated key

Backlight Setting

Main LCD backlight

Incoming And SMS LED

Charge LED

Network settings

Network selection

Security settings

SIM security

PIN lock

Change PIN

Change PIN2

Phone security

Phone lock

Change password

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)

MENU TREE

Bluetooth

- Power
- Visibility
- My device
- My name
- Preferred storage

Restore settings

Organizer

- Calendar***
- Calculator***
- Alarm***
- Tasks***
- Stopwatch***

Services

(depending on network provider)

Helpline 0844 800 6503

(See page 73 for costs and hours of operation)



Audioline GmbH
D-41460 Neuss
11/2015 – Edition 3.0

