

<b>ASH VACUUM CLEANER</b> <b>CAT. NO.: 23030</b>
---

## OPERATION MANUAL

**Model: NRJ807C-16L-800W**


220-240V~ 50Hz 800W, 16L Class II

The appliance is dry use only

**Attention:** Please read this manual before installing and using.

**Important:**

- Check whether or not the local power supply mains matches the appliance electric rating printed on the label before operation.
- When the appliance is not in operation, please remove plug from supply mains.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Don't remove the plug by pulling the power cord.
- Do not leave the appliance alone when the appliance is in work.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- Don't press and roll the power cord by heavy objects.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don't vacuum the objects as follows: liquid, inflammable and explosive dangerous material, corrosive material and burning ash, match, and cigarette
- Do not use the appliance to vacuum the dust harmful to health.
- Keep the appliance in dry environment.
- Don't touch the live parts in appliance.
- Only to repair the appliance by the manufacturer or its authorized service agent.
- Do not use appliance for other than intended use
- Pay more attention when cleaning the stairs
- Use the accessories and spare parts only supplied by the manufacturer or its authorized service agent.
- **When using the appliance to vacuum fireplace ash, No ashes with a temperature more than 50°C shall be vacuumed, No ashes and other objects that the fire is not completely extinguished shall be vacuumed.**
- **Do not use the appliance if the filter is not installed! Do not use other filters except the ones (fire prevention filter) attached to the appliance by manufacturer.**

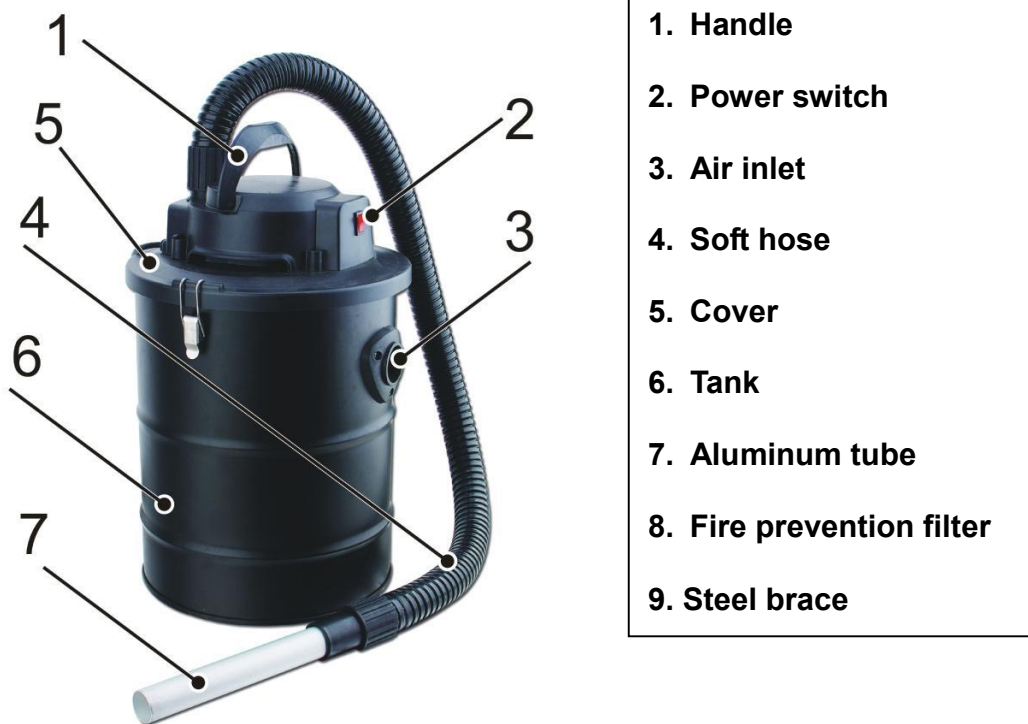

(A1)

The function of the parts:

- Aluminum pipe: used to vacuum ash in the fireplace (photo A2);
- Power switch: Control the appliance to work or stop working;



A2

### A. Installation of the vacuum cleaner

- Take out the appliance and accessories from the packing box, check the accessories and whether the appliance enclosure is well-found or not (Photo A1)
- loose the clasp, and take the head part from the container
- Attach the filter set to the bottom of head part.
- put the head part on the container and use the clasp to make it fixed
- Insert the aluminum pipe into the soft tube, and another end of soft tube is inserted into air inlet.( Photo A1)

### B. Vacuum ash

- only use the fire prevention filter
- when the container is full or it feels difficult to vacuum more dust, the filter needs to be taken out and cleaned.
- While vacuum the fireplace ash, the ash temperature must be below 50 °C. (Photo A2). Do not vacuum the ashes that fire is not extinguished!

### C. Blowing function.

- Only use to blow leaves ,sands, coal pellets etc.
- Take out the soft hose(4) from the air inlet (3),
- Then insert the hose into the hole at the top of motor cover (as the photo A3 shown).
- Switch on the machine for blowing.

#### Attention:


**Please make sure there is no ash stay in the hose before blowing, otherwise the ash will come out. You should suck clear air for few seconds or shake the hose to keep it clean. Do not blow towards people.**



(A3)

#### D. After the usage

- Press the switch to turn off vacuum cleaner.
- Pull out plug.
- Roll up the power cable.
- Disassemble the soft tube from the appliance
- take the head part from the appliance
- empty the dust container and wash it,
- use rag to dry the container
- take out the filter, clean and wash it carefully, and dry it in air before installed on vacuum cleaner (as the photo A4 shown)

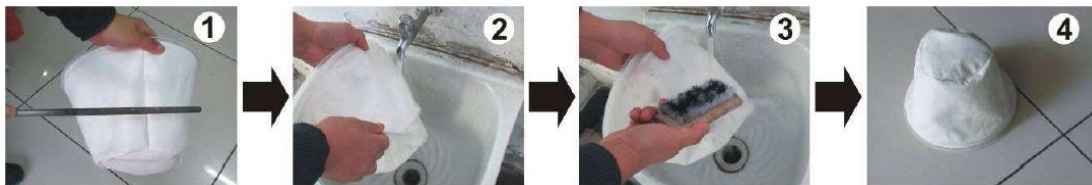

(A4)

#### E. Maintenance

- The container and outer shell of head part need to be cleaned frequently
- The dirty container should wash with the clear water clearly
- The filter should wash with the clear water clearly.
- If the appliance working unsatisfactory, it is usually resulted from the jam of soft tube or conjunction of pipes or accessories. In that case, please clean the parts concerned.

#### DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria 01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland 044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France 0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 23.05.2013