

EP199

1. [MODE] Button
2. [SET] Button
3. [12/24 HR] Button
4. [▲] [AL ON/OFF] Button
5. [▼] Button
6. [BACKLIGHT] Button
7. [EMERGENCY !] Button (SIREN)
8. Volume Knob (OFF ... MAX)
9. Tuning Knob
10. Retractable Handle
11. FM Antenna
12. [LIGHT] Button
13. Compass
14. AM/FM Selector
15. Battery Selector : Rechargeable Battery (Dynamo) / Cell Battery
16. Foldable Crank (for Dynamo)
17. 6V DC-IN Jack
18. Battery Door
19. Inner Compartment for Rechargeable Battery
20. Torch
21. Full-Charge indicator
22. Charging indicator
23. Earphone Jack
24. [RESET] Button

BATTERY INSTALLATION

Unscrew to open the battery door and then follow the steps below to install the batteries:

1. DIGITAL CLOCK:

2 x "AG13" (1.5V) button cells (included)

Insert the two button cells into the clock battery compartment according to the correct polarities.

2. RADIO & TORCH:

A. 1 x "Ni-MH" (2.4V) Rechargeable Battery (included)

(For Dynamo & AC adapter)

Unscrew to open the inner battery door and then insert the plug of the battery into the jack. Close the inner battery door and screw it.

B. 3 x "AA-size" (1.5V) batteries (not included)

Insert the batteries into battery compartment according to the correct polarities.

DIGITAL CLOCK:

A. TIME

1. Press and hold [SET] 1 second to enter setting mode (the setting sequence is Hour> Minute > Year > Month > Date), then press [▲] and then [SET] to adjust the normal time & date. Press [MODE] to exit.

2. Press and hold [SET] 3 seconds to flash the Week-display and press [▲] to switch the language. (There are 5 languages for selection : (EN) English , (GE) German , (IT) Italian , (ES) Spanish & (RU) Russian)

Remarks:

A. While the LCD display is in normal time, press [12/24 HR] to select 12-hour or 24-hour format.

B. Auto Calendar from Year 2003 - 2053.

B. ALARM SET

1. Press [MODE] once to enter Alarm mode.

2. Press [SET] once to flash the hour digit (the setting sequence is Hour > Minute), then press [▲] and then [SET] to adjust the alarm time. Press [MODE] to exit.

3. Press and hold [▲/ AL ON/OFF] to turn on/off the alarm (🔔).

WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.



Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD - Germany