


USER'S MANUAL

PRODUCT DESCRIPTION

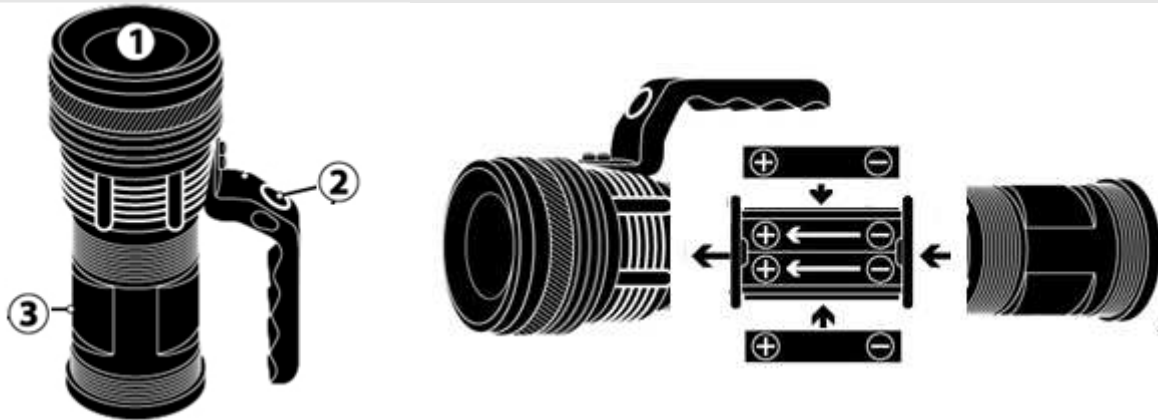

1. LED
2. Button to turn the LED on/off and to obtain different light modes
3. Battery compartment

OPERATING INSTRUCTION

- Press the switch (2) once to turn on LOW light.
- Press it again to turn on HIGH light.
- Press it once again to turn on flashing mode.
- Press it again to turn off.

SAFETY WARNINGS



ATTENTION: In any case, never look directly at the LED without eye protection.

SPECIFICATIONS

- Power: 3 X AA (not supplied), 4.5V $\overline{\text{---}}$
- LED: x1, 3 Watts

CARE AND MAINTENANCE

- The flashlight is not designed for underwater use. If your flashlight is accidentally submersed or exposed to extremely wet conditions, dry out any water that might have immersed before using it again.
- Do not store battery in the light for long periods of time; they may leak and damage the flashlight.

WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic

devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France
Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany
Made in PRC

