 


Better Home
Better Life

Instruction Manual

MONEUAL® HAAN®

**Rechargeable
Electric Rotating Mop**

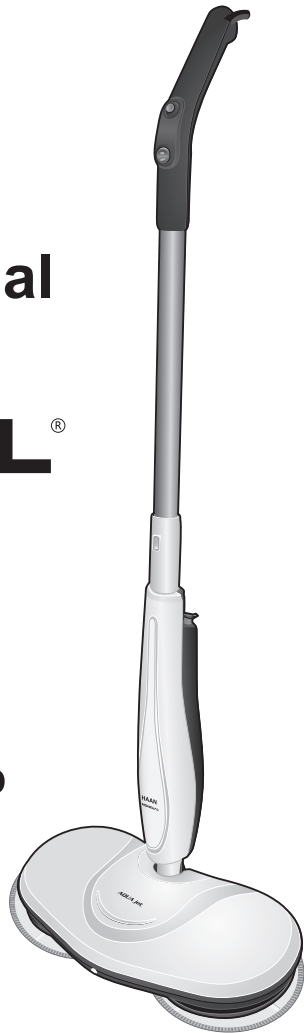

AME-5500W

Contents

■ Safety Instructions	3P
■ Name of components and structure	8P
■ Assembly Instructions	9P
■ Application instructions	10P
■ Attaching the cleaning pads	12P
■ Washing instructions of cleaning pads	13P
■ Battery Replacement	14P
■ Relevant safety attentions	15P
■ Please check before claiming against the problems	16P
■ Product specification	16P
■ Product Warranty	17P

▶ Safety Instructions


⚠ Warning: To warn of hazards or unsafe practices which could result in severe personal injury or death.

- * Read all instructions before using this appliance.
- * When using an electrical appliance, always follow basic precautions, including following instructions.


The Power Cord

⚠ Warning: Improper use can lead to personal injury and damage to property.


- ※ Do not use with damaged cable or plug. If the supply cable is damaged, it must be replaced. Please contact our service center.

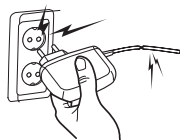

Do not use with damaged cable or plug. It may lead to risk of fire, electric shock, or injury.

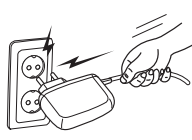


Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. It may lead to risk electric shock or injury.

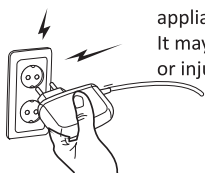


Never handle plug or appliance with wet hands. It may lead to electric shock or injury.



Damaged or loose socket will cause electric shocks, burns and fires.

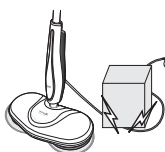

Do not put the heavy object on cord, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord.

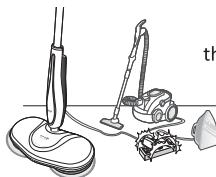

Please do not share the socket with other items. It may lead to electric shock or risk of fire.



Please use the provided adaptor of this product for charging. (may cause barrier or fire)



When charging, don't start the product.

- when using, please ensure that the charging has been finished.
- when the LED light is changed from red into green, it mean that the charging has been finished.
- In order to ensure the product performance, please charge in time.


► Safety Instructions

Installation and storage

▲Warning: Improper use can lead to personal injury and damage to property.



Do not use appliance in flammable or explosive areas. It may lead to risk of fire or injury.

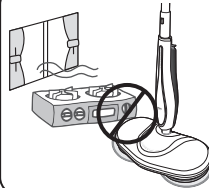

Do not use or operate appliance near flammable liquids, vapors or combustible dusts.




Please supervise children in the vicinity of the appliance and do not let them play with it.



When charging, do not use the appliance.



Do not use outdoors or on wet surfaces. Do not expose to rain. Store indoors.

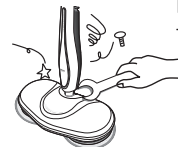

Do not disassemble the appliance by yourself.




Do not put the appliance into the water.



When the cord connector of body and handle separated, please be careful not to break. (See page 9)



Please use the dry towel or neutral detergent to clean the appliance. Do not pick up toxic material such as chlorine bleach, drain cleaner or flammable or combustible liquids to clean it.

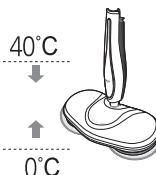


The proper temperature for storing appliance would be between 0°C and 40°C.

▶ Safety Attentions


Application

⚠ Warning: Improper use can lead to personal injury and damage to property.




Customer service center


Do not use with damaged cord or plug. If appliance is not working as it should has been dropped or damaged, please contact our service center.




Do not allow to be used by children or the aged.

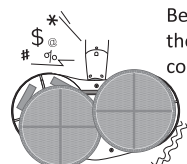


Before using the appliance, the cleaning pads should be correctly installed.

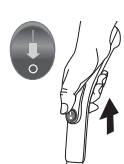

Before moving the appliance, switch off the appliance. Move the appliance with holding the hand grip.




Do not hit the appliance or do not place heavy objects on it.




STOP!


When the appliance overheats, the safety mode will start and it will be automatically turned off. The appliance may be used again in 2 hours.

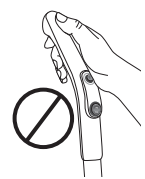


Before moving the appliance, switch off the appliance. Move the appliance with holding the hand grip

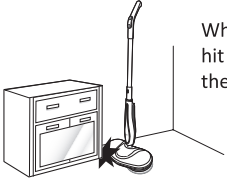

When using, do not hit the furnitures with the appliance.

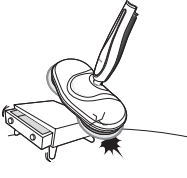

When using, do not hit the furnitures with the appliance.

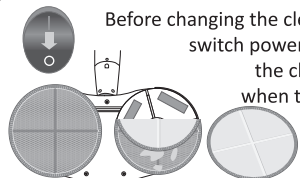


Before changing the cleaning pads, switch power off. Change the cleaning pads when they get cold.


▶ Safety Attention

Application


⚠ Warning: Improper use can lead to personal injury and damage to property.

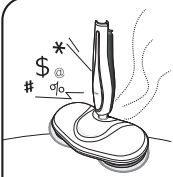


Do not use the appliance and do plug out immediately, if it is not in proper operating condition, such as noise or burned smell or smoke.

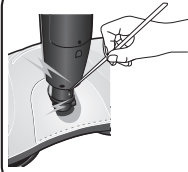


Do not touch the appliance with nail or metal. It may lead to electrical shock.

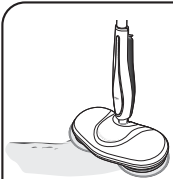

Use indoors only. For use on bare floors or sealed wood floors. Not for use on carpets. Keep objects, clothing, hairs, fingers and other body parts away from the moving part.

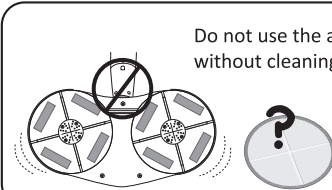

Do not use the appliance without cleaning pads.

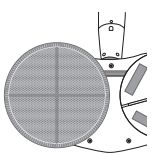

Before using the appliance, the cleaning pads should be correctly installed.



Use the provided measuring cup when filling water into the appliance.



Use indoors only. Do not use for other application.



Keep hairs, fingers and other body parts away from the moving part of the appliance.



When using, keep pets from the appliance away.






When using, do not put magnet or metallic objects near to the appliance.

► Safety Attentions



Application

⚠ Warning: Improper use can lead to personal injury and damage to property.

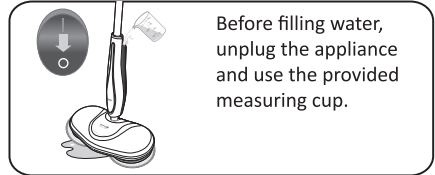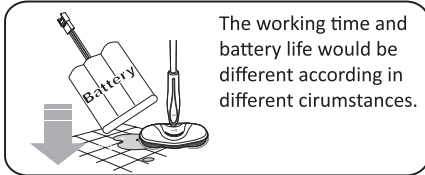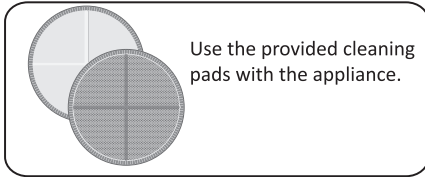


- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The instructions for appliances with a liquid dispensing system shall specify the amount and type of the liquid to be used.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The instructions for appliances incorporating batteries that are intended to be replaced by the user shall include the following:
 - the type reference of the battery;
 - the orientation of the battery with regard to polarity;
 - the method of replacing batteries;
 - details regarding safe disposal of used batteries;
 - warning against using non-rechargeable batteries;
 - how to deal with leaking batteries.
- The instructions for appliances incorporating a battery that contains materials that are hazardous to the environment shall give details on how to remove the battery and shall state that– the battery must be removed from the appliance before it is scrapped;
 - the appliance must be disconnected from the supply mains when removing the battery;
 - the battery is to be disposed of safely.
- The instructions for appliances with rotating brushes shall state that a hazard may occur if the appliance runs over the supply cord.
- The instructions shall state that the plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

▶ Name of components and structure

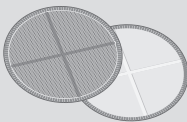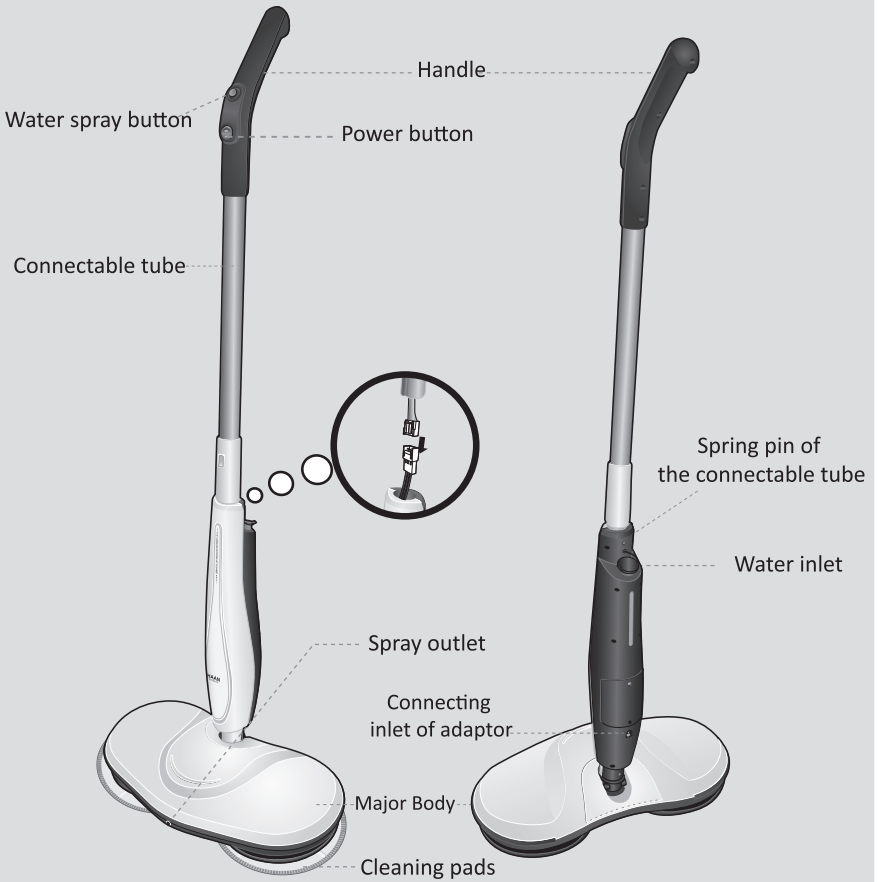

Cleaning pads

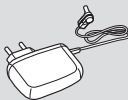

Adaptor



Measuring cup




IM

▶ Assembly Instructions


※ Unplug the appliance before assembling or disassembling. It may lead to the risk of electric shock.

1. Please take the handle and the major body from the packing box.

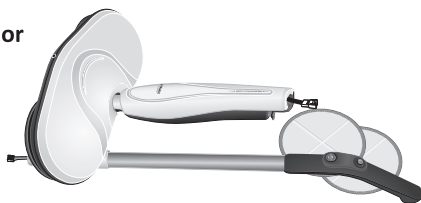


2. Connect the inner cord of connectable tube and the major body

※ When the connector is connected, ensure that the connector is inside of the body when assembling the connectable tube into the major body. The connector should be firmly connected .

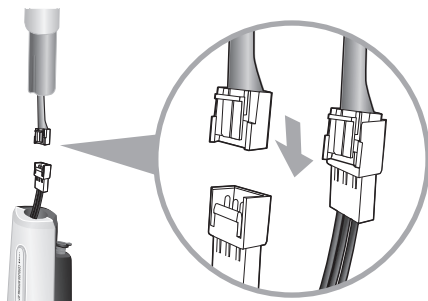

3. To connect the connectable tube to the major body, please push the spring pin of the lower tube part and insert into the major body. 'Click'


※ When connecting, it will make 'click' sound. Please draw the both part tightly to ensure if the installation is successful.

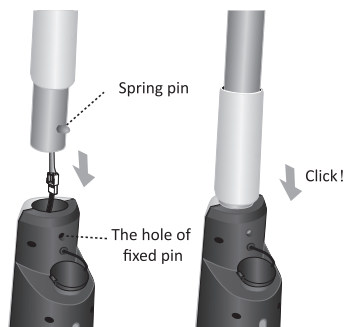


Application instructions

※ Please follow the instructions below


1. When cleaning, please wring the cleaning pads out to remove any excess water and use them.

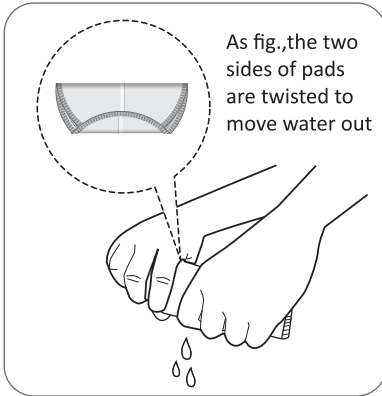


2. Attach the cleaning pads on the rotating plates.

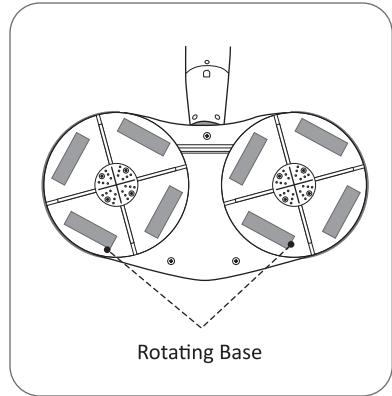

3. Match the center point of pads and the rotating plate when attaching the pads.

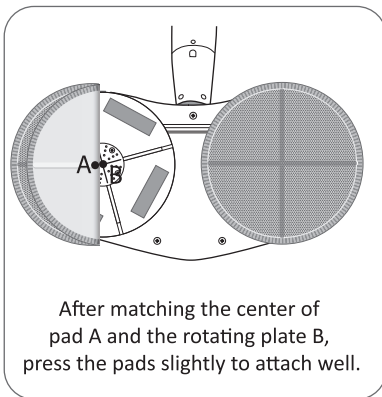


4. Before using, remove strange /foreign objects from the cleaning area. They may cause the barrier or damage of the appliance.

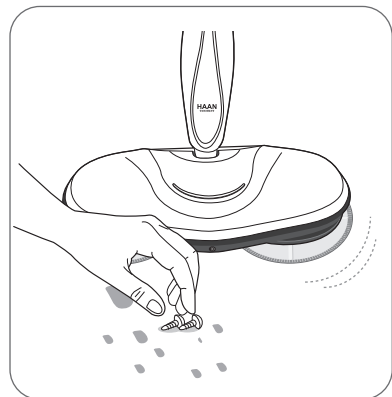

▶ Application instructions

※ Please follow the instructions below

5. Push the power button to turn on.

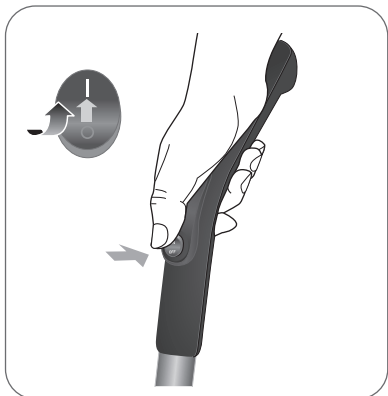

6. When using, press the water spray button for water spraying. (with full water inside)



7. When water is not spraying out, turn the power button off and refill the water in the water tank. Please do not use any other detergent /bleach etc. with water to refill.



8. Please use the adaptor of this appliance to charge. The charging time is around 3 hours. The green light illuminates when charging has been completed correctly.




▶ Attaching the cleaning pads

Installation instruction

- ※ Ensure that the cleaning pads cover the entire rotating plate.
- ※ The center of pads and rotating plate should match well.


※ Please follow the instruction below to attach the cleaning pads.

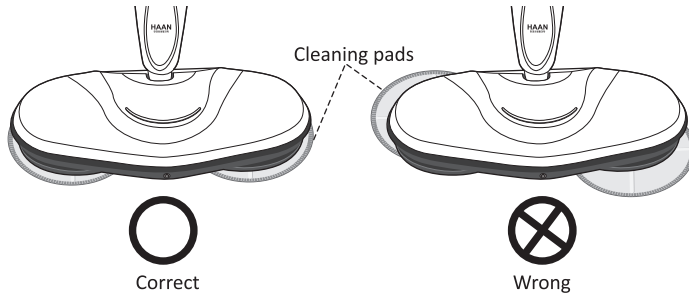


▶ Washing instructions of cleaning pads

Washing instructions

- 1 When laundering with washing machine, please use only mild detergent.

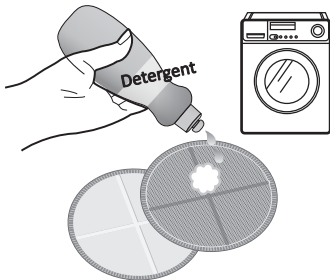


- 2 When washing by hands, rinse in water (use warm water at 40°C possibly with addition of a commercially available mild detergent)

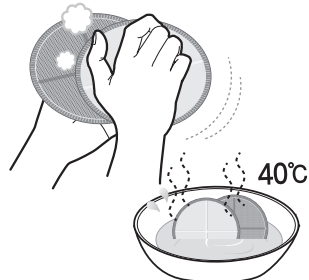


▶ Attaching the cleaning pads

Washing instructions


- 1** After using pads, please wash and dry.

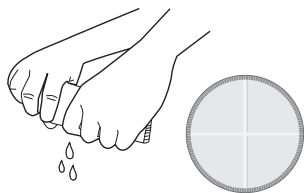

- 2** When washing, remove the foreign object to avoid the damage of floor.

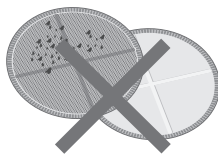


- 3** Ideally wash the cleaning pads alone.

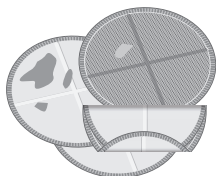

Washing alone


- 4** Do not use Bleach or Fabric Softener.

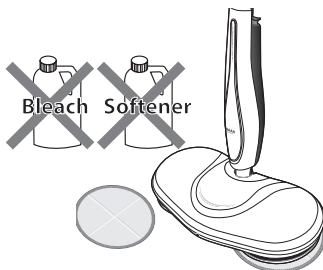

- 5** The cleaning pads should be removed first before washing. Do not wash the pads with being attached to the appliance.




- 6** Do not put the pads into boiling water.

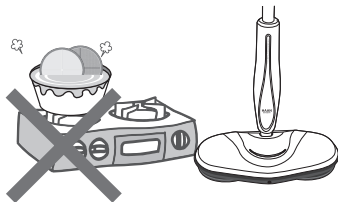


▶ Battery Replacement

※ It is recommended to fully charge the appliance before using for the first time.


1. Remove the battery cover on the back of the major body.

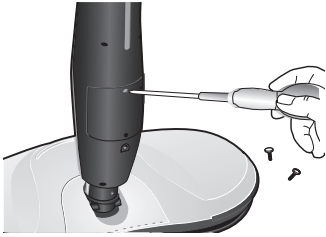


2. Open the battery cover.

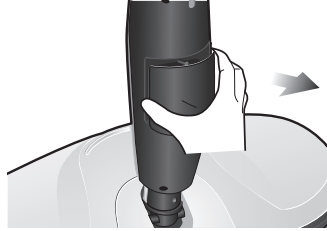


3. Separate the connector of battery cord.

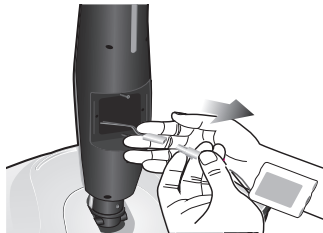

4. Change the old battery with the new one.

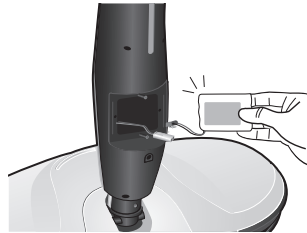

5. Match the connector and make the connection properly.

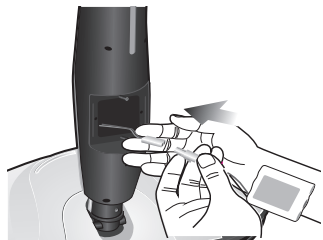

6. Replace the battery cover with screws.



▶ Relevant safety attentions

※ For your safety, please follow the instructions below.

- Once the batter has the visible bulging problem that is very dangerous, please contact with the manufacturer or distributor immediately.
- Please use the correct and pointed adaptor for charging.
- Please don't be close to fire or flammable objects(Don't put into microwave oven)
- Please don't put into the cars in summer.
- Please don't use or store at the places of high temperature,such as Sauna room.
- Please don't touch the connector of battery with coin,necklace,keys,etc.
- Please use the NI-MH Battery that is pointed by the manufacturer.
- Please don't uninstall,press,beat,etc.
- Please don't do the unnormal colliding action,such as falling down from the high places.
- Please don't put into the high temperature above 60°C.
(avoid the direct sunshine)
- should be far from the wet.
- If the battery has leakage,don't touch the skin with liquid.If touched carelessly,please clean with water and see the doctor.
- Please recognize the correct using of two electric poles(+)(-).
- Please keep the battery far from the places that the children can reach.
- If swallowed the battery,please see the doctor immediately.
- If stored the battery separately,please put it at the dry and clean place.
- Please clean the dirty on the battery with clean and dry cloth.
- Please follow the correct instruction of manufacturer for charging.
- After long time storage,in order to achieve at the best performance,please charge and discharge repeatedly for several times.
- When using the battery under the normal temperature (20±5°C) , the performance is the best.
- Please use the battery correctly according to its application.
- Please handle the scrapped battery correctly.

▶ Please check before claiming against the problems

※ Please check the subjects below before claiming.

Barriers` Appearances	Check list
Can't start	-please ensure whether the product has been charged (the warranty is 6months). -please ensure whether the switch has been started. -The normal running time is 20 minutes,there will be the difference for different environment. -Please ensure whether the product is overtime used, after 2 hours,please restart.
Much water left on floor	Please ensure whether the pads are wet
The machine body shocks seriously	Please ensure whether the pads are installed well
There is the foreign noise when cleaning	-there is the light "buzz" noise,which is normal. -please ensure whether there are foreign objects.

▶ Product Specification

Item name	Rechargeable Electric Rotating Mop
Model No.	AME-5500W
Adaptor	Input:100-240V, 50/60Hz
	Output:16.8V \approx 1000mA
Rated Power	95W
Unit dimension	450mm(W)x250mm(D)x1200mm(H)
Net Weight	3.4Kg
Manufacturer	Suzhou HAAN Co.,Ltd No.89 Songshan Road,Suzhou City,China



Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.

▶ Limited Product Warranty

Moneual guarantees a two(2) year functionality of this product (except batteries), with exclusion of the following limitations. This warranty is only effective in the country in which it was bought.

Please keep following informations ready when contacting our service.

Product Name
Purchase Date
Dealer

Two (2) years
product warranty
Six (6) months
battery warranty

Model Name
Serial Number
Invoice Number

MTG GmbH in Eschborn/ Germany is responsible for our customer service. Every customer request will be answered within 7 working days. The warranty service takes place within 20 working days after first request. There's no warranty claim for any devices of other manufacturers or devices bought from non-authorized dealers.

Warranty Service

For warranty service please first contact your dealer. Otherwise e-mail to: support@moneual.de
For devices in commercial use, there is no warranty claim.

Defects		Service		
		Within warranty time	After warranty time	
The Product works demonstrably incorrect within warranty time and without customer debt.	DOA (Dead on arrival) An error occurs while first commissioning, latest 7 days after delivery date.	The product will be replaced by a new one**** or refund.		
	An error occurs within 6 months after delivery date.	The product will be replaced by a new one or free repair. ****		
	A defect occurs within 4 weeks after the exchange on a replacement device.	Free repair****		
	There is no replacement device available.	Free repair**** or refund.		
	Multiple repair	three (3) times cause of same defect.	Product will be replaced**** or refund of utility value**** + 10%	Paid repair
		five (5) times cause of different defects.		
		MTG GmbH lost the product.		
No spare parts available.		Refund of utility value**** + 10% or offer for replacement product.		
Repair is economically unviable.		Offer for replacement product		
		Paid repair, free disposal or offer for replacement product.		
Defects cause of intent, misuse or lack of maintenance by customer.	Irreparable	Offer for replacement product or free disposal.	Offer for replacement product or free disposal.	
	Repairable	Paid repair or free disposal.	Paid repair or free disposal.	

(While warranty time, MTG GmbH got several redress possibilities discretion in their own.)

* except shipping costs.

* Subsequent exchange, resale or replacement or rather a subsequent repair of the product will not lead to a renewal of warranty or to the beginning of a new warranty period.

Each parts of the product or other devices, which have been replaced, become property of MTG GmbH. For repair or replacement, new, as new or refurbished products or parts can be used.

* Value after use:

Purchase date	Compensation for use (% Of purchase price)
up to 6. Month	100%
7. – 12. Month	90%
13. – 18. Month	80%
19. – 24. Month	70%



If you submit a service application and no defect can be found, MTG GmbH will have the right to raise a handling fee.
Please read the user's manual attentively before you contact customer service!

Cases without warranty claim:

- Product without defect
- normal wear (f.ex. batteries, filter, wheels, brushes, mops and water tank)
- Use of replacement or exchange parts, which are not provided or recommended by us.

- Defects caused by misuse or lack of maintenance.
- Connection to an inappropriate power grid
- Bumps or Falls
- Use of inadmissible cleaning supplies
- Damage caused by tried self-repair
- Disregard of the user's manual's safety instructions.(water damage, stair fall, a.s.o.)
- Damage caused by improper packing

- Other Cases
- Force majeure
- Life time of consumer goods is expired