 




Electric Knife Sharpener

Manual

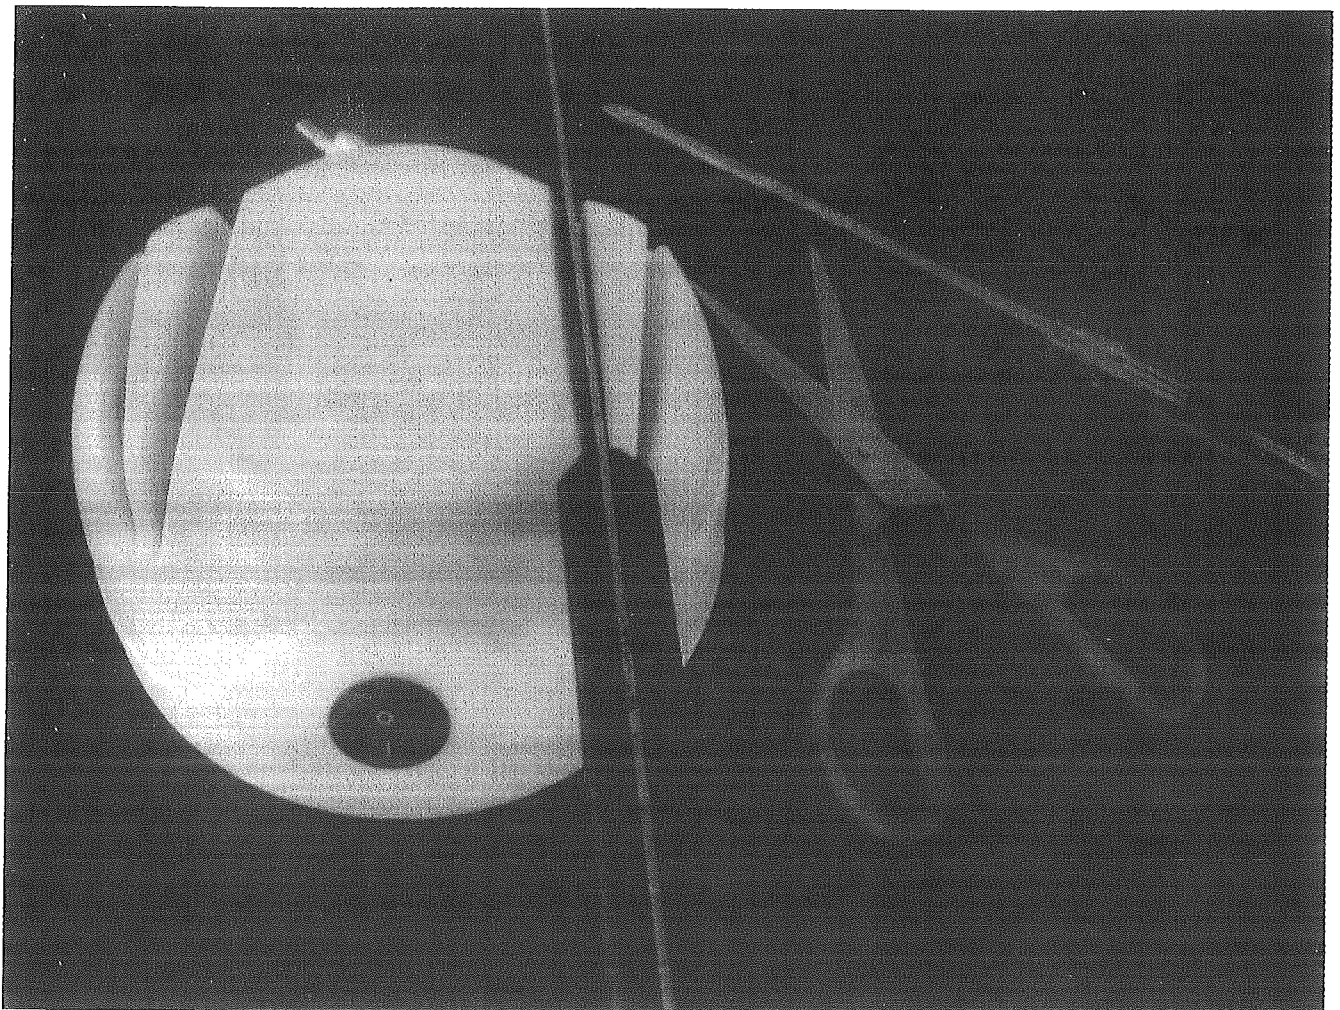

Art.No.-38932

  Parts

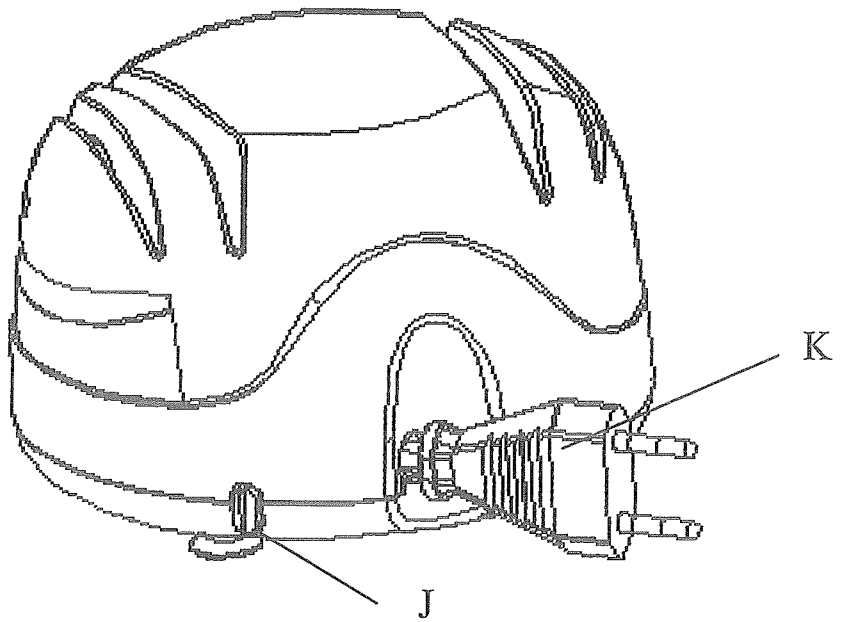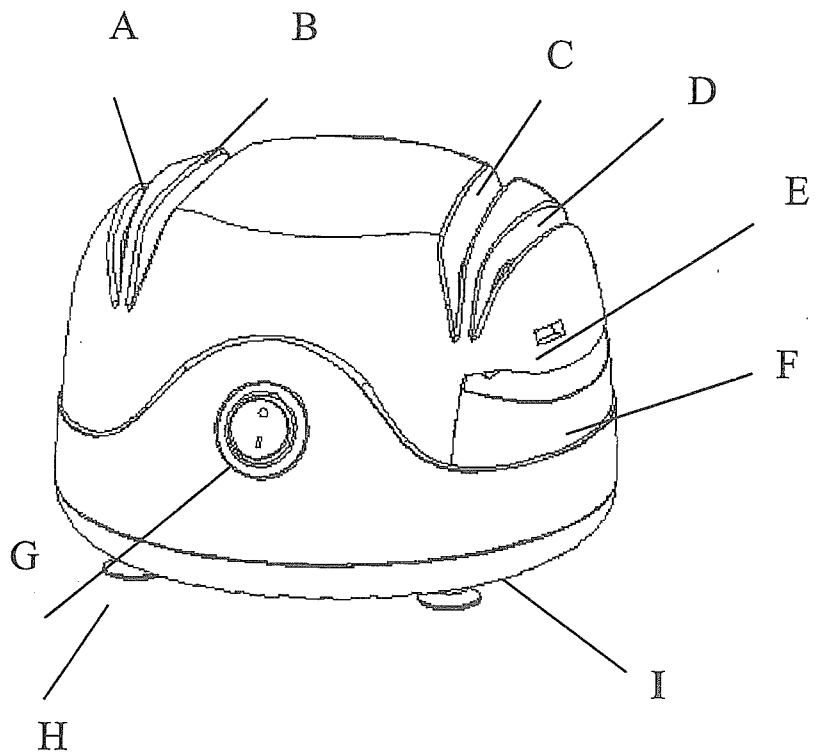


- A. Coarse sharpening "V" groove
- B. Coarse sharpening "V" groove
- C. Fine sharpening "V" groove
- D. Fine sharpening "V" groove
- E. Screwdriver sharpening hole
- F. Scissors sharpening groove
- G. Switch
- H. Feet
- I. Base
- J. Button of cord
- K. Cord

Use and Care


Before using for the first time

 - 1) A. As you unwrap the product, make sure you remove all packaging materials. Wipe parts clean with a damp towel. Familiarize yourself with each part.
- B. Do not add water when sharpening knife, scissors, and screwdriver, otherwise will cause the risk of electric shock.




2) How to sharpen the knife:


- Place the appliance on a stable surface. Pull out the cord and plug in with the outlet.
 - Press the switch, motor will drive the grinding wheel running up.
 - Hold the shank and put the edge to the "V" groove, pull out the knife at even speed until the edge reach the bottom of the groove, repeat sharpening 3-4 times. (Put the edge as close to the front as possible, then the whole edge can be sharpened)
 - "V" groove in picture 1-2 are coarse sharpening, picture 3-4 are fine sharpening. Picture 1 and 3 for sharpening the right edge, picture 2 and 4 for sharpening the left edge.
 - You can choose coarse or fine sharpening according to the sharpness of the edge, can coarse-sharpen and then fine-sharpen if the edge is dull. This will shorten the time and the appliance will have long service life; You only need to fine-sharpen if the edge is not very dull.
- Attention: When the knife block the grinding wheel and the wheel do not run, must take out the knife and do not sharpen the knife until the appliance run normally, otherwise it will damaged easily.**
- Turn off the switch and cut the power.
 - Clean the table and the appliance, finish sharpening.
 - Do not run the appliance over 30 seconds each us .If due to the use of more than 30 seconds lead to overheating stop. Do not run again until taking rest for 20 minutes and cooling off after each use.

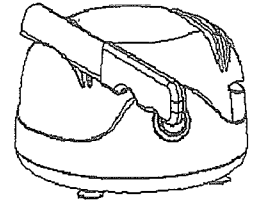


1

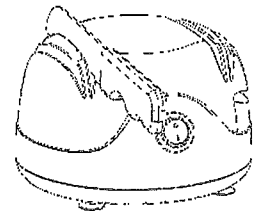

2

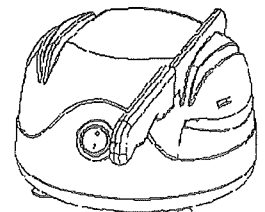

3

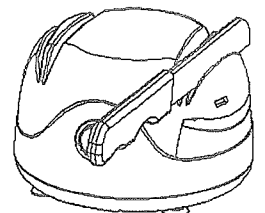 

4

 
 
 
Tips and Hints

- Pull out the knife at even speed to get better sharpening.
- Slightly adjust the angle of the edge in the "V" groove for close contact.

- Press the appliance when sharpening, it will be more stable.
- Motor will be hot after several cycles, must let the appliance cool off before operate again.



3) How to sharpen the scissors:

- Connect with power and press the switch
- Open the scissors and hold one edge.
- Put the sharper side upward and move the edge upward along the incline of the groove, pull out the scissors when it get contact with the grinding wheel, repeat 4-5 times.
- Can slightly adjust the angle between the scissors and the incline according to the thickness and size
- Sharpen the other edge in the same way.
- Turn off and cut the power
- Clean the table and the appliance, finish sharpening.
- **Attention: When the scissors block the grinding wheel and the wheel do not run, must take out the knife and do not sharpen the knife until the appliance run normally, otherwise it will damaged easily.**
- **Do not run the appliance over 30 seconds each us .If due to the use of more than 30 seconds lead to overheating stop.. Do not run again until taking rest for 20 minutes and cooling off after each use.**

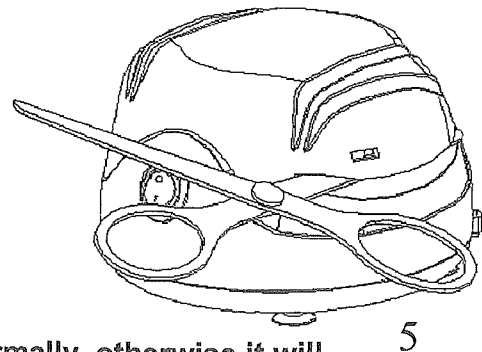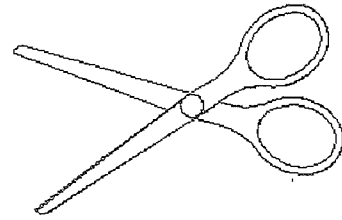

4) How to sharpen the screwdriver:

  
- Connect with power and press the switch
- Hold the handle of the screwdriver
- Put the head of screwdriver into "V" groove, and move downward to contact with the grinding wheel to amend two deformed surface(Amend one by one)
- Put the screwdriver into the square hole to contact with the grinding wheel for mending.
- Turn off and cut the power
- Clean the table and the appliance, finish sharpening.
- **Attention: When the screwdriver block the grinding wheel and the wheel do not run, must take out the knife and do not sharpen the knife until the appliance run normally, otherwise it will damaged easily.**

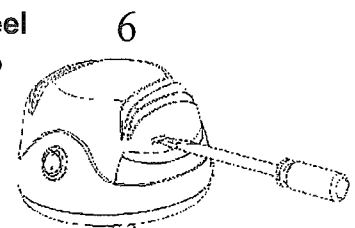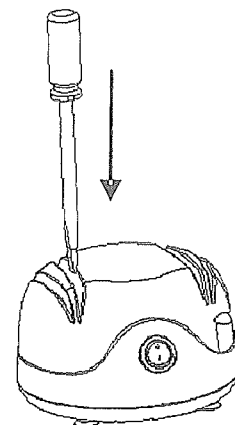

- Do not run the appliance over 30 seconds each us .If due to the use of more than 30 seconds lead to overheating stop.. Do not run again until taking rest for 20 minutes and cooling off after each use.

5) How to use the auto re-winded function

 - Pull out the cord to suitable length and plug in with the outlet when use.
- Unplug from the outlet first and then press the cord button after use, the cord will return back automatically; If the cord can not return, then hold the cord and press the button, the cord will rewind slowly.
- **Attention: when you feel that the cord could not pull out anymore, do not force to pull out, maybe the cord is all pulled out already.**

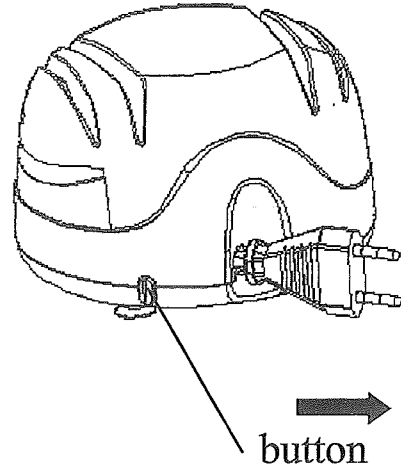

Clean and Care

 
- Unplug the unit after each use.
- Do not clean the base under running water or wash in a dishwasher. Clean this part with a damp cloth.
- Do not hit the grinding wheel ,otherwise it is easily damaged.
- The cord must be repaired by professional manufacturer or service center if damaged.

NOISE

We hereby declared that our product has a working noise level more than 81.4dB (A) but less than 85dB (A). We suggest wearing ear protection while operating the appliance.

DISPOSAL :

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

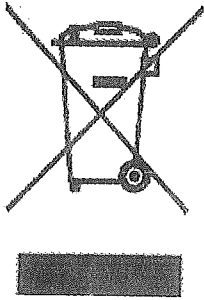

Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany

0180 . 530 63 63* or info@eurotops.de

in Austria

01 . 230 60 43 12 or info@eurotops.at

in Switzerland

044 . 28 36 125 or info@eurotops.ch

in the Netherlands

026 . 37 36 333 or info@eurotops.nl

in France

0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 26.04.2013

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not touch hot surfaces.
4. To protect against electrical shock, do not place this unit in water or other liquid. See instructions for cleaning.
5. Must be unplugged after use or before cleaning, and clean the appliance until completely cool off.
6. Return appliance to the nearest authorized service facility to repair or adjustment if the cord is damaged.
7. The use of accessory attachments not recommended by the appliance manufacturer may be hazardous.
8. Do not use outdoors or while standing in a damp area.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven..
11. The appliance is with cord and plug; plug in and press ON to start up, press OFF to stop operation.
12. Do not apply other attachments to the appliance.
13. A fire may occur if covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.
14. Do not add water when sharpening knife, scissors, screwdriver, otherwise will cause the risk of electric shock.
15. Close supervision is necessary when any appliance is used by or near children.

Save this manual, the product is for household use only!